



HOW TO SET

The default code is 0-0-0-0. To set your own combination, please follow these steps:

- 1 Open the lock, slide the reset button (1) 90° from Fig.1 position to Fig. 2 position.
- 2 Turn the dials (2), to set your own combination to the convex line (Fig.2).
- 3 Push the reset button (1) back to Fig.3 position. Then the setting is completed, you can open the lock with your new combination.

HOW TO USE

- 1 Dial your passwords to the convex line in the window, pull the cable out of the lock housing, the lock is opened.
- 2 Insert the cable back into the lock housing, turn the dials to scramble the numbers, then the lock is closed.

